

## Human BMP1 ELISA Kit

**Catalog No.:** abx150818

**Size:** 96T

**Range:** 15.6 pg/ml - 1000 pg/ml

**Sensitivity:** < 6.0 pg/ml

**Storage:** Store standard, detection reagent A, detection reagent B and the 96-well plate at -20°C, and the rest of the kit components at 4°C.

**Application:** For quantitative detection of Bone Morphogenetic Protein 1 (BMP1) in Human Serum, Plasma, Tissue Homogenates and other biological fluids.

**Introduction:** Bone morphogenetic protein 1, also known as BMP1, is a protein which in humans is encoded by the BMP1 gene. BMP1 belongs to the peptidase M12A family of bone morphogenetic proteins (BMPs). It induces bone and cartilage development. Unlike other BMPs, it does not belong to the TGF $\beta$  superfamily. It was initially discovered to work like other BMPs by inducing bone and cartilage development. It however, is a metalloprotease that cleaves the C-terminus of procollagen I, II and III. It has an astacin-like protease domain.

### Principle of the Assay

This kit is based on sandwich enzyme-linked immuno-sorbent assay technology. An antibody specific to Bone Morphogenetic Protein 1 (BMP1) is pre-coated onto a 96-well plate. The standards and samples are added to the wells and incubated. Biotin conjugated anti-Bone Morphogenetic Protein 1 (BMP1) antibody is used as detection antibody. Next, Avidin conjugated to HRP is added to each microplate well and incubated. After TMB substrate solution is added only wells that contain Bone Morphogenetic Protein 1 (BMP1), biotin-conjugated antibody and enzyme-conjugated Avidin will produce a blue color product that changes into yellow after adding acidic stop solution. The intensity of the color yellow is proportional to the Bone Morphogenetic Protein 1 (BMP1) amount bound on the plate. The O.D. absorbance is measured spectrophotometrically at 450 nm in a microplate reader, and then the concentration of Bone Morphogenetic Protein 1 (BMP1) can be calculated.

### Kit components

1. One pre-coated 96 well plate
2. Standard: 2 tubes
3. Standard Diluent Buffer: 20 ml
4. Wash Buffer (30X): 20 ml. Dilution: 1:30
5. Detection Reagent A (100X): 120  $\mu$ l
6. Detection Reagent B (100X): 120  $\mu$ l
7. Diluent A: 12 ml
8. Diluent B: 12 ml
9. Stop solution: 6 ml
10. TMB substrate : 9 ml
11. Plate sealer: 4

### Material Required But Not Provided

1. 37°C incubator
2. Microplate reader (wavelength: 450 nm)
3. Precision pipette and disposable pipette tips
4. Automated plate washer
5. ELISA shaker
6. 1.5 ml tubes
7. Plate cover
8. Absorbent filter papers
9. 100 ml and 1 L volume graduated cylinders

## Protocol

### A. Preparation of sample and reagents

#### 1. Sample

Isolate the test samples soon after collecting, analyze immediately or store at 4°C for up to 5 days. Otherwise, store at -20°C for up to one month or -80°C for up to two months to avoid loss of bioactivity. Avoid multiple freeze-thaw cycles.

- **Serum:** Samples should be collected into a serum separator tube. Coagulate the blood at room temperature (~2 hr) or overnight at 4°C. Centrifuge at approximately 1000 × g for 20 min. Analyze the serum immediately or aliquot and store at -20°C or -80°C.
- **Plasma:** Collect plasma using heparin or EDTA as an anticoagulant. Centrifuge for 15 minutes at 1000 × g within 30 minutes of collection. Assay immediately or aliquot and store at -20°C. Avoid hemolysis and high cholesterol samples.
- **Tissue homogenates:** The preparation of tissue homogenates will vary depending upon tissue type – this is just an example. Rinse tissues with ice-cold PBS to remove the excess of blood. Weigh before homogenization. Finely mince tissues and homogenize with a tissue homogenizer on ice in PBS and sonicate the cell suspension. Centrifuge the homogenates at 5000 × g for 5 min and collect the supernatant. Assay immediately or aliquot and store at -20°C.
- **Other biological fluids:** Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.

#### Note:


- » Please bring sample slowly to room temperature. Sample hemolysis will influence the result. Hemolyzed specimen should not be used.
- » Samples must be diluted so that the expected concentration falls within the kit's range. Sample should be diluted in 0.01 mol/L PBS (PH=7.0-7.2).
- » If the sample are not indicated in the manual's applications, a preliminary experiment to determine the validity of the kit will be necessary.
- » Fresh sample or recently obtained samples are recommended to prevent protein degradation and denaturalization that may lead to erroneous results. For better detection, it is highly recommended to use serum instead of plasma.
- » Always use non-pyrogenic, endotoxin-free tubes for blood collection.

#### 2. Wash buffer

Dilute the concentrated Wash buffer 30-fold (1/30) with distilled water (i.e. add 20 ml of concentrated wash buffer into 580 ml of distilled water).

#### 3. Standard

Bring samples and all kit components to room temperature. Prepare the Standard with 1.0 ml of Standard Diluent buffer (kept for 10 min at room temperature) to make the 2000 pg/ml Standard Solution (use within one hour), and further dilute by a factor of 2 to give the highest standard (1000 pg/ml). Mix gently and avoid foaming or bubbles. Label 6 tubes with 500 pg/ml, 250 pg/ml, 125 pg/ml, 62.5 pg/ml, 31.25 pg/ml and 15.625 pg/ml respectively. Aliquot 0.5 ml of the Standard diluent buffer into each tube. Add 0.5 ml of 1000 pg/ml standard solution into the 1st tube and mix thoroughly. Transfer 0.5 ml from 1st tube to 2nd tube, mix thoroughly, and so on.

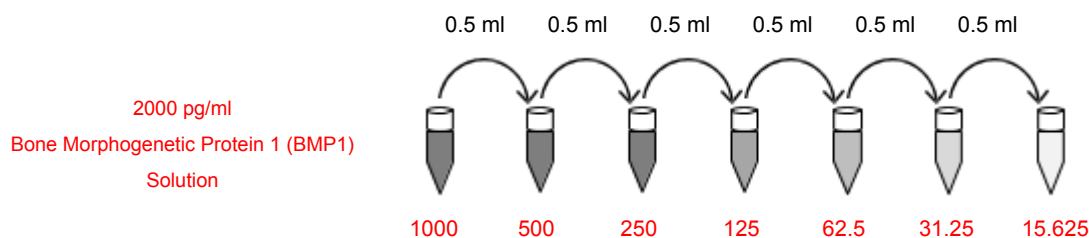

#### 4. Detection Reagent A and B Preparation

Centrifuge Detection Reagent A and B briefly before use. Detection Reagent A and B should be diluted 100-fold with the Diluent A

and B and mixed thoroughly, they are sticky solutions therefore pipette with a slow, smooth action to reduce volume errors. The solution should be prepared no more than 2 hours prior to the experiment. Reconstituted Standard, Detection Reagent A and B can only be used once.

## B. Assay Procedure

Equilibrate the kit components and samples to room temperature before use. It is recommended to plot a standard curve for each test.

1. Set standard, test sample and control (zero) wells on the pre-coated plate respectively, and then, record their positions. It is recommended to measure each standard and sample in duplicate.
2. Add 100 µl of the diluted standards into the standard wells. Aliquot 100 µl Standard Diluent Buffer to the control (zero) well.
3. Add 100 µl of appropriately diluted sample into the test sample wells. Add the solution at the bottom of each well without touching the side wall. Shake the plate mildly to mix thoroughly.
4. Seal the plate with a cover and incubate for 1 h at 37°C.
5. Remove the cover and discard the liquid. Do not wash.
6. Aliquot 100 µl of the detection Reagent A working solution to each well. Seal the plate with a cover and incubate for 1 h at 37°C.
7. Discard the solution and wash the plate 3 times with wash buffer. Do not let the wells completely dry at any time.

**Manual Washing:** Discard the solution without touching the side walls. Tap the plate on absorbent filter papers or other absorbent material. Fill each well completely with Wash buffer and incubate on an ELISA shaker for 2 min. Discard the contents and tap the plate on absorbent filter papers or other absorbent material. Repeat this procedure three times.

**Automated Washing:** Discard the solution and wash the plate three times overfilling the wells with Wash buffer. After the final wash invert the plate and tap on absorbent filter papers or other absorbent material. It is recommended that the washer be set for a soaking time of 1 min.

8. Aliquot 100 µl of Detection Reagent B working solution into each well, seal and incubate at 37°C for 30 min.
9. Discard the solution and wash the plate 5 times with wash buffer (each time let the Wash Buffer stay for 1-2 min). Discard the Wash Buffer and blot the plate onto paper towels or other absorbent material.
10. Aliquot 90 µl of TMB Substrate into each well. Seal the plate with a cover and incubate at 37°C for 10-20 min. Avoid exposure to light. The incubation time is for reference use only, the optimal time should be determined by end user. Do not exceed 30 min.
11. Add 50 µl of Stop solution into each well. There should be a color change to yellow. Gently tap the plate to ensure thorough mixing.
12. Ensure that there are no fingerprints or water on the bottom of the plate, and that the fluid in the wells is free of bubbles. Measure the absorbance at 450 nm immediately.

For calculation, (the relative O.D.450) = (the O.D.450 of each well) – (the O.D.450 of Zero well). The standard curve can be plotted as the relative O.D.450 of each standard solution (Y) vs. the respective concentration of the standard solution (X). Log-log curve fitting is recommended for data analysis. The Bone Morphogenetic Protein 1 (BMP1) concentration of the samples can be interpolated from the standard curve.

**Note:** If the samples measured were diluted, multiply the dilution factor by the concentrations from interpolation to obtain the concentration before dilution.

## C. Precautions

1. Before using the kit, centrifuge the tubes briefly to bring down the contents trapped in the lid.
2. Wash buffer may crystallize and separate. If this happens warm to room temperature and mix gently until the crystals are completely dissolved.
3. Avoid foaming or bubbles when mixing or reconstituting components. Prepare the standards within 15 min of starting the experiment.
4. It is recommended measuring each standard and sample in duplicate.
5. Do NOT let the wells uncovered for extended periods between incubation. Once reagents are added to the wells DO NOT let the strips dry at any time during the assay. This can inactivate the biological material on the plate. Incubation time and temperature must be controlled.
6. Ensure plates are properly sealed or covered during incubation steps.
7. Complete removal of all solutions and buffers during wash steps is necessary for accurate measurement readings.
8. Do not reuse pipette tips and tubes to avoid cross contamination.
9. Do not use expired components or components from a different kit.
10. Store the TMB substrate in the dark and to avoid edge effect of plate incubation for temperature differences it is recommended to equilibrate the TMB substrate for 30 min at room temperature. Aspirate the dosage needed with sterilized tips and do not dump the residual solution back into the vial.

## D. Precision

Intra-assay Precision (Precision within an assay): 3 samples with low, medium and high levels of Bone Morphogenetic Protein 1 (BMP1) were tested 20 times on one plate, respectively.

Inter-assay Precision (Precision between assays): 3 samples with low, medium and high levels of Bone Morphogenetic Protein 1 (BMP1) were tested on 3 different plates, 8 replicates in each plate.

CV (%) =  $SD/mean \times 100$

Intra-Assay: CV < 10%

Inter-Assay: CV < 12%