Product Manual Revision date: 28/Jun/2017

# abbexa 🔶

## Androstenedione ELISA Kit

Catalog No.: abx257568

Size: 96T

Range: 0.156 ng/ml - 10 ng/ml

Sensitivity: < 0.094 ng/ml

Storage: Store at 4°C for up to 6 months.

Application: For quantitative detection of Androstenedione in Serum, Plasma, Tissue Homogenates and other biological fluids.

**Introduction:** Androstenedione is a naturally occurring androgenic steroid that is produced by the adrenal glands, ovaries, and testicles. Once released into the blood it is rapidly converted into testosterone, but there are also pathways through which androstenedione is converted into estrogen.

#### **Principle of the Assay**

This kit is based on a competitive enzyme-linked immuno-sorbent assay technology. Androstenedione is pre-coated onto a 96-well plate. The standards, samples and a biotin conjugated antibody specific to Androstenedione are added to the wells and incubated. After washing away the unbound conjugates, Streptavidin-HRP (SABC) is added to each microplate well and incubated. After TMB substrate solution is added only wells that contain Androstenedione will produce a blue colour product that changes into yellow after adding stop solution. The intensity of the color yellow is inverse proportional to the Androstenedione amount bound on the plate. The O.D. absorbance is measured spectrophotometrically at 450 nm in a microplate reader, and then the concentration of Androstenedione can be calculated.

#### **Kit components**

- 1. One pre-coated 96 well plate
- 2. Standard: 2 tubes
- 3. Sample/Standard Diluent Buffer: 20 ml
- 4. Biotin conjugated antibody (Dilution 1:100): 60 µl
- 5. Antibody diluent buffer: 10 ml
- 6. Streptavidin-HRP conjugate (SABC) (Dilution 1:100): 120 µl
- 7. SABC diluent buffer: 10 ml
- 8. TMB substrate: 10 ml
- 9. Stop solution: 10 ml
- 10. Wash buffer (25X): 30 ml

#### Material Required But Not Provided

- 1. 37°C incubator
- 2. Microplate reader (wavelength: 450 nm)
- 3. High-precision pipette and sterile pipette tips
- 4. Automated plate washer
- 5. ELISA shaker
- 6. 1.5 ml tubes to prepare standard/sample dilutions
- 7. Deionized or distilled water
- 8. Absorbent filter papers
- 9. 100 ml and 1 liter graduated cylinders

## **Product Manual**

Revision date: 28/Jun/2017



### Protocol

#### A. Preparation of sample and reagents

#### 1. Sample

Store samples to be assayed within 24 hours at 2-8°C. Alternatively, aliquot and store at -20°C or -80°C for long term. Avoid repeated freeze-thaw cycles.

- Serum: Samples should be collected into a serum separator tube. Coagulate the serum by leaving the tube undisturbed in a vertical position overnight at 4°C or at room temperature for up to 60 minutes. Centrifuge at approximately 1000 × g for 20 min. Analyze the serum immediately or aliquot and store at -20°C or -80°C.
- Plasma: Collect plasma using EDTA-Na<sub>2</sub> as an anticoagulant. Centrifuge for 15 minutes at 1000 x g within 30 minutes of collection. Assay immediately or aliquot and store at -20°C. Avoid hemolysis and high cholesterol samples.
- Tissue homogenates: The preparation of tissue homogenates will vary depending upon tissue type this is just an example. Rinse tissues with ice-cold PBS to remove the excess of blood. Weigh before homogenization. Finely mince tissues and homogenize with a tissue homogenizer on ice in PBS and sonicate the cell suspension. Centrifuge the homogenates at 5000 × g for 5 min and collect the supernatant. Assay immediately or aliquot and store at -20°C.
- Other biological fluids: Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.

#### Note:

- » Fresh samples or recently obtained samples are recommended to prevent degradation and denaturalization that may lead to erroneous results. It is recommended to store samples to be used within 5 days at 4°C, within 1 month at -20°C and within 2 months at -80°C.
- » Samples should be clear and transparent. Samples must be diluted so that the expected concentration falls within the kit's range.
- » Please bring sample slowly to room temperature. Sample hemolysis will influence the result. Hemolyzed specimen should not be used. Samples that contain NaN<sub>3</sub> cannot be detected as it interferes with HRP.
- » Always use non-pyrogenic, endotoxin-free tubes for blood collection.

#### 2. Wash buffer


Dilute the concentrated Wash buffer 25-fold (1/25) with distilled water (i.e. add 30 ml of concentrated wash buffer into 720 ml of distilled water).

#### 3. Standard

Preparation of the Androstenedione standard: standard solution should be prepared no more than 15 min prior to the experiment. Centrifuge at 10,000×g for 1 minute as the powder may drop off from the cap when opening if you do not spin down. (Note: Do not dilute the standard directly in the plate).

a.) 10 ng/ml standard solution. Add 1 ml of Sample/Standard diluent buffer into one Standard tube, keep the tube at room temperature for 10 min, mix gently (do not vortex!) and avoid foaming or bubbles. Use within one hour.

b.) 5 ng/ml  $\rightarrow$  0.15625 ng/ml standard solutions: Label 6 tubes with 5 ng/ml, 2.5 ng/ml, 1.25 ng/ml, 0.625 ng/ml, 0.3125 ng/ml and 0.15625 ng/ml. Aliquot 0.3 ml of the Sample / Standard diluent buffer into each tube. Add 0.3 ml of the above 10 ng/ml standard solution into 1st tube and mix thoroughly. Transfer 0.3 ml from 1st tube to 2nd tube and mix thoroughly. Transfer 0.3 ml from 2nd tube to 3rd tube and mix thoroughly, and so on.



Product Manual Revision date: 28/Jun/2017

# abbexa 🔶

**Note:** The concentrated standard can be stored at 4°C for up to 12 hours, or at -20 °C for up to 48 hours. Avoid repeated freeze-thaw cycles. Please use the diluted Standard for a single assay procedure and discard after use.

4. Preparation of Biotin conjugated antibody working solution: prepare no more than 1 hour before the experiment.

a.) Calculate the total volume of the working solution: 0.05 ml / well × quantity of wells. (Allow 0.1-0.2 ml more than the total volume).
b.) Dilute the Biotin conjugated antibody with Antibody diluent buffer at 1/100 and mix thoroughly. i.e. Add 1 µl of Biotin conjugated antibody into 99 µl of Antibody diluent buffer.

5. Preparation of Streptavidin-HRP Conjugate (SABC) working solution: prepare no more than 30 min before the experiment.
a.) Calculate the total volume of the working solution: 0.1 ml / well × quantity of wells. (Allow 0.1-0.2 ml more than the total volume).
b.) Dilute the SABC with SABC diluent buffer at 1/100 and mix thoroughly. i.e. Add 1 µl of SABC into 99 µl of SABC diluent buffer.

#### **B. Assay Procedure**

Equilibrate the SABC working solution to room temperature and TMB substrate at 37°C, for at least 30 minutes prior to use. It is recommended to plot a standard curve for each test.

- 1. Wash the plate two times before adding standard, samples and buffers. Any strips that are not being used should be kept dry and stored at 4°C. Set standard, test sample and control (zero) wells on the pre-coated plate and record their positions. It is recommended to measure each standard and sample in duplicate.
- 2. Add 50 µl of the prepared standards solutions into the standard wells.
- 3. Add 50 µl of Sample / Standard diluent buffer into the control (zero) well.
- 4. Add 50 µl of appropriately diluted sample into test sample wells.
- 5. Immediately add 50 µl of Biotin conjugated antibody working solution into each well. (Please add the solution at the bottom of each well without touching the side wall).
- 6. Cover the plate with the plate sealer. Gently tap the plate to mix thoroughly. Incubate at 37°C for 45 minutes.
- 7. Remove the cover, and wash the plate 3 times. Discard the solution without touching the side walls. Blot the plate on an absorbent material. Fill each well completely with wash buffer and soak for at least 1-2 min. Discard the contents and clap the plate on absorbent filter papers or other absorbent material. Repeat this procedure for a total of three times.

**Please note:** For automated washing, discard the solution in all wells and wash three times overfilling the wells with Wash buffer. After the final wash invert the plate and tap on absorbent filter papers or other absorbent material. It is recommended that the washer be set for a soaking time of 1 min.

- Add 100 µl of Streptavidin-HRP Conjugate (SABC) working solution into each well, cover the plate with a new sealer and incubate at 37°C for 30 minutes.
- 9. Remove the cover and wash the plate 5 times with Wash buffer. Allow the wash buffer to remain in the wells 1-2 min for each wash. Discard the washing buffer and blot the plate onto absorbent filter papers or other absorbent material.
- 10. Add 90 µl of TMB substrate into each well. Cover the plate and incubate at 37°C in dark conditions for 15-20 minutes (incubation time is for reference only, do not exceed 30 minutes). When an apparent gradient appears in the standard wells the reaction can be terminated.
- 11. Add 50 µl of Stop solution into each well (including the blank well). There should be a color change to yellow. Gently tap the plate to ensure thorough mixing.
- 12. Ensure that there are no fingerprints or water on the bottom of the plate, and that the fluid in the wells is free of bubbles. Measure the absorbance at 450 nm immediately.

# abbexa 🔶

This assay is competitive, therefore there is an inverse correlation between Androstenedione concentration in the sample and the absorbance measured. Create a graph with the log of the standard concentration (y-axis) and absorbance measured (x-axis). Apply a best fit trendline through the standard points. Use this graph calculate sample concentrations based on their OD values. If samples have been diluted, the concentration read from the standard curve must be multiplied by the dilution factor.

**Note:** If the samples measured were diluted, multiply the dilution factor by the concentrations from interpolation to obtain the concentration before dilution.

#### **C. Precautions**

- 1.Before using the kit, centrifuge the tubes briefly to bring down the contents trapped in the lid. For each step in the procedure, total dispensing time for addition of reagents to the assay plate should not exceed 10 minutes.
- 2.Avoid foaming or bubbles when mixing or reconstituting components. Prepare the Standard solutions within 15 min of starting the experiment. Please use the diluted Standard for a single assay procedure and discard after use.
- 3.It is recommended to assay all standards, controls and sample in duplicate. Do NOT let the plate dry out completely as this will inactivate the biological material on the plate.
- 4.Ensure plates are properly sealed or covered during incubation steps.
- 5.Complete removal of all solutions and buffers during wash steps is necessary for accurate measurement readings.
- 6.To avoid cross contamination do not reuse pipette tips and tubes

7.Wash buffer may crystallize and separate. If this happens, please warm the tube and mix gently to dissolve.

8. The substrate is supplied as a ready to use solution. The TMB substrate is light sensitive and should be protected from direct sunlight and UV sources. Unreacted substrate should be colorless or very light yellow in appearance. To avoid the edge effect of plate incubation for temperature differences it is recommend to equilibrate the SABC working solution at room temperature (18-25°C) and TMB substrate at 37°C for at least 30 min prior to use. Aspirate the dosage needed with sterilized tips and do not dump the residual solution back into the vial.

#### **D. Precision**

Intra-assay Precision (Precision within an assay): 3 samples with low, medium and high levels of Androstenedione were tested 20 times on one plate, respectively.

Inter-assay Precision (Precision between assays): 3 samples with low, medium and high levels of Androstenedione were tested on 3 different plates, 8 replicates in each plate.

CV (%) = (Standard Deviation / mean) × 100

Intra-Assay: CV<8%

Inter-Assay: CV<10%




### Sample Recovery (after spiking)

Sample Type			Range	Average Recovery			
Serum (n=5)			85-104%	9	97%		
EDTA plasma (n=5)			86-102%	9	93%		
Heparin plasma (n=5)			89-103%	(	96%		
Linearity							
Sample Type	1:2		1:4	1:8	1:16		
Serum (n=5)	86-1049	%	88-101%	89-98%	86-104%		
EDTA plasma (n=5)	91-1019	%	82-98%	84-100%	82-97%		
Heparin plasma (n=5)	81-1009	%	85-100%	83-98%	89-100%		

### E. Typical Data & Standard Curve

Typical Standard Curve Data provided for demonstration purposes only. A new standard curve must be generated for each assay performed.

Concentration ng/ml	0	0.15625	0.3125	0.625	1.25	2.5	5	10
OD450	2.668	1.623	1.484	1.194	0.766	0.639	0.414	0.273

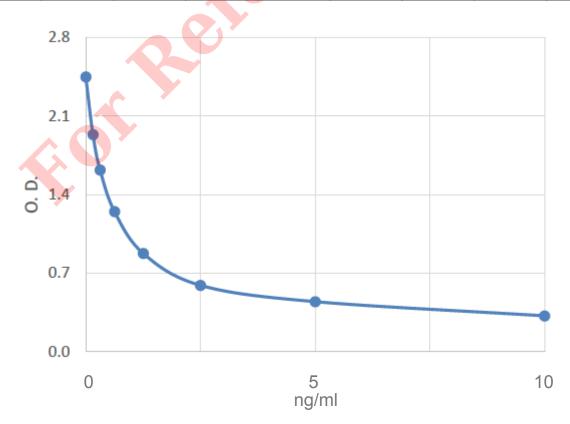

Abbexa Ltd., Cambridge Science Park, Cambridge, CB4 0EY, UK www.abbexa.com · Email: info@abbexa.com · Phone: +44 (0) 1223 755950 · Fax: +44 (0) 1223 755951 Registered in England: 8475531 · VAT Reg. No: GB 167 9240 79 5