Revision date: 15/Nov/2018



Docosahexaenoic Acid (DHA) CLIA Kit

Catalog No.: abx490544

Size: 96T

Range: 3.9 pg/ml - 1000 pg/ml

Sensitivity: < 1.5 pg/ml

Storage: Store standard, detection reagent A, detection reagent B and the 96-well plate at -20°C, and the rest of the kit components at 4°C.

Application: For quantitative detection of DHA in Serum, Plasma, Cell Culture Supernatants, Tissue Homogenates, Cell Lysates and other biological fluids.

Introduction: Docosahexaenoic acid (DHA) is an omega-3 fatty acid that is a primary structural component of the human brain, cerebral cortex, skin, and retina. In physiological literature, it is given the name 22:6(n-3). It can be synthesized from alpha-linolenic acid or obtained directly from maternal milk (breast milk), fish oil, or algae oil.

Principle of the Assay

This kit is based on competitive chemiluminescent immunoassay technology. DHA antibody is pre-coated onto a 96-well plate. A competitive inhibition reaction is launched between biotin labeled DHA and unlabeled DHA with the pre-coated antibody specific to DHA. After washing away the unbound conjugates, avidin conjugated to Horseradish Peroxidase is added to each microplate well and incubated. After the mixture of substrate A and B is added only wells that contain biotin labeled DHA will produce chemiluminescence. The intensity of the emitted light is inversely proportional to the amount of DHA in the sample or standard.

Kit components

- 1. One pre-coated 96-well microplate (12 × 8 well strips)
- 2. Standard: 2 tubes
- 3. Standard Diluent Buffer: 20 ml
- 4. Wash Buffer (30X): 20 ml. Dilution: 1:30
- 5. Detection Reagent A (100X): 120 µl
- 6. Detection Reagent B (100X): 120 μI
- 7. Diluent A: 12 ml
- 8. Diluent B: 12 ml
- 9. Substrate A: 10 ml
- 10. Substrate B: 2 ml
- 11. Plate sealer: 4

Material Required But Not Provided

- 1. 37°C incubator
- 2. Luminometer capable of reading 96-well microplates (lag time
- 30.0 secs and read time 1.0 sec/well)
- 3. Multi and single channel pipettes and sterile pipette tips
- 4. Squirt bottle or automated microplate washer
- 5. Deionized or distilled water
- 6. Tubes to prepare standard or sample dilutions
- 7. Absorbent filter papers
- 8. 100 ml and 1 L volume graduated cylinders

Revision date: 15/Nov/2018



Protocol

A. Preparation of sample and reagents

1. Sample

Isolate the test samples soon after collecting, analyze immediately or store at 4°C for up to 5 days. Otherwise, store at -20°C for up to one month or -80°C for up to two months to avoid loss of bioactivity. Avoid multiple freeze-thaw cycles.

- **Serum:** Samples should be collected into a serum separator tube. Coagulate the serum by leaving the tube undisturbed in a vertical position overnight at 4°C or at room temperature for up to 60 minutes. Centrifuge at approximately 1000 × g for 20 min. Analyze the serum immediately or aliquot and store at -20°C or -80°C.
- Plasma: Collect plasma using heparin or EDTA as an anticoagulant. Centrifuge for 15 minutes at 1000 × g within 30 minutes of collection. Assay immediately or aliquot and store at -20°C. Avoid hemolysis and high cholesterol samples.
- Cell culture supernatants: Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.
- Tissue homogenates: The preparation of tissue homogenates will vary depending upon tissue type this is just an example. Rinse tissues with ice-cold PBS to remove the excess of blood. Weigh before homogenization. Finely mince tissues and homogenize with a tissue homogenizer on ice in PBS and sonicate the cell suspension. Centrifuge the homogenates at 5000 × g for 5 min and collect the supernatant. Assay immediately or aliquot and store at -20°C.
- Cell lysates: Detach adherent cells with trypsin and collect by centrifugation and remove the supernatant. Wash the cells three times in ice-cold PBS and re-suspend cells in PBS. Lyse the cells by ultra-sonification 4 times or freeze at -20°C and thaw to room temperature 3 times. Centrifuge at 1500 × g for 10 min at 2-8°C to remove cellular debris. Collect the supernatant and assay immediately.
- Other biological fluids: Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.

Note:

- » Please bring sample slowly to room temperature. Sample hemolysis will influence the result. Hemolyzed specimen should not be
- » Samples must be diluted so that the expected concentration falls within the kit's range. Sample should be diluted in 0.01 mol/L PBS (PH=7.0-7.2).
- » If the sample are not indicated in the manual's applications, a preliminary experiment to determine the validity of the kit will be necessary.
- » Fresh sample or recently obtained samples are recommended to prevent protein degradation and denaturalization that may lead to erroneous results.
- » Always use non-pyrogenic, endotoxin-free tubes for blood collection.

2. Wash buffer

Dilute the concentrated Wash buffer 30-fold (1/30) with distilled water (i.e. add 20 ml of concentrated wash buffer into 580 ml of distilled water).


3. Standard

Bring samples and all kit components to room temperature. Prepare the Standard with 1.0 ml of Standard Diluent buffer (kept for 10 min at room temperature) to make the 1000 pg/ml Standard Solution. Allow the reconstituted standard to sit for 10 minutes with gentle agitation prior to carrying out the serial dilutions; avoiding foaming or bubbles. Label 4 tubes with 500 pg/ml, 250 pg/ml, 125 pg/ml, 62.5 pg/ml. Aliquot 0.5 ml of the Standard diluent buffer into each tube. Add 0.5 ml of 1000 pg/ml standard solution into the 1st tube and mix thoroughly. Transfer 0.5 ml from 1st tube to 2nd tube, mix thoroughly, and so on.

Revision date: 15/Nov/2018



1000 pg/ml DHA Solution

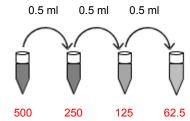

4. Detection Reagent A and B Preparation

Centrifuge Detection Reagent A and B briefly before use. Detection Reagent A and B should be diluted 100-fold with the Diluent A and B and mixed thoroughly. They are sticky solutions, therefore pipette with a slow, smooth action to reduce volume errors. Please discard after use.

5. Substrate working solution Preparation

Substrate A and B should be mixed with a ration of 99:1 respectively and mixed thoroughly. For example, prepare 1 ml of substrate working solution by mixing 0.99 ml of Substrate A and 0.01 ml of Substrate B.

B. Assay Procedure

Equilibrate the kit components and samples to room temperature before use. It is recommended to plot a standard curve for each test.

- Set standard, test sample and control (zero) wells on the pre-coated plate and record their positions. It is recommended to
 measure each standard and sample in duplicate or triplicate. Add the solution at the bottom of each well without touching the side
 walls.
- 2. Add 50 µl of the diluted standards into the standard wells. Aliquot 50 µl Standard Diluent Buffer to the control (zero) well.
- 3. Add 50 µl of appropriately diluted sample into the test sample wells. Add the solution at the bottom of each well without touching the side wall. Shake the plate mildly to mix thoroughly.
- 4. Immediately aliquot 50 μl of Detection Reagent A working solution (if it appears cloudy mix gently until the solution is uniform) to each well. Shake the plate gently to mix thoroughly (a microplate shaker is recommended).
- 5. Seal the plate with a cover and incubate for 1 h at 37°C.
- 6. Remove the cover and discard the solution. Wash the plate 3 times with 1X Wash Buffer. Fill each well completely with Wash buffer (350 µl) using a multi-channel Pipette or autowasher (1-2 minute soaking period is recommended). Complete removal of liquid at each step is essential for good performance. After the final wash, remove any remaining Wash Buffer by aspirating or decanting. Invert the plate and blot it against clean absorbent paper towels.
- 7. Aliquot 100 µl of Detection Reagent B working solution into each well, seal and incubate at 37°C for 30 min.
- 8. Repeat the aspiration/wash process 5 times as explained in step 6.
- 9. Aliquot 90 µl of TMB Substrate into each well. Seal the plate with a cover and incubate at 37°C for 10-20 min. Avoid exposure to light. The incubation time is for reference use only, the optimal time should be determined by end user. Do not exceed 30 min.
- 10. Add 50 μl of Stop solution into each well. There should be a color change to yellow. Gently tap the plate to ensure thorough mixing.
- 11. Measure the chemiluminescence signal in a microplate luminometer immediately.

Revision date: 15/Nov/2018

abbexa 🍮

For calculation, (the relative RLU) = (the RLU of each well) - (the RLU of Zero well). The standard curve can be plotted as the relative RLU of each standard solution (Y) vs. the respective concentration of the standard solution (X). Log-log curve fitting is recommended

for data analysis. The DHA concentration of the samples can be interpolated from the standard curve.

Note: If the samples measured were diluted, multiply the dilution factor by the concentrations from interpolation to obtain the

concentration before dilution.

C. Precautions

1. Before using the kit, centrifuge the tubes briefly to bring down the contents trapped in the lid.

2. Wash buffer may crystallize and separate. If this happens warm to room temperature and mix gently until the crystals are

completely dissolved.

3. Avoid foaming or bubbles when mixing or reconstituting components. Prepare the Standard solutions within 15 min of starting the

experiment. Please use the diluted Standard for a single assay procedure and discard after use. For each step in the procedure,

total dispensing time for addition of reagents to the assay plate should not exceed 10 minutes.

4. It is recommended measuring each standard and sample in duplicate.

5. Do not let the wells uncovered for extended periods between incubation. Once reagents are added to the wells, avoid letting the

strips dry as this can inactivate the biological material on the plate. Incubation time and temperature must be controlled.

6. Ensure plates are properly sealed or covered during incubation steps

7. Complete removal of all solutions and buffers during wash steps is necessary for accurate measurement readings.

8. Do not reuse pipette tips and tubes to avoid cross contamination.

9. Do not use expired components or components from a different kit.

10. Store the substrate A and B in the dark.

D. Precision

Intra-assay Precision (Precision within an assay): 3 samples with low, medium and high levels of DHA were tested 20 times on one

plate, respectively.

Inter-assay Precision (Precision between assays): 3 samples with low, medium and high levels of DHA were tested on 3 different

plates, 8 replicates in each plate.

CV (%) = (Standard Deviation / mean) × 100

Intra-Assay: CV<10%

Inter-Assay: CV<12%

Abbexa Ltd., Cambridge Science Park, Cambridge, CB4 0EY, UK www.abbexa.com · Email: info@abbexa.com · Phone: +44 (0) 1223 755950 · Fax: +44 (0) 1223 755951 Registered in England: 8475531 · VAT Reg. No: GB 167 9240 79